
Glenn Research Center

Boiling eXperiment Facility (BXF)



The Boiling eXperiment Facility (BXF) for the Microgravity Science Glovebox (MSG)

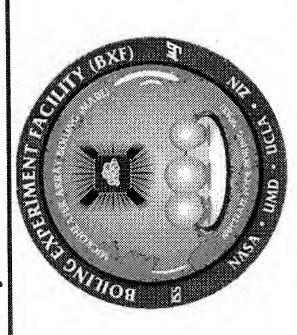

John McQuillen, MABE Project Scientist
David Chao, NPBX Project Scientist
Frank Vergilli, BXF Project Manager
NASA Glenn Research Center

www.nasa.gov





Abstract

Boiling is an effective means of cooling by removing heat from surfaces through vaporization conducting pool boiling tests in microgravity, the effect of buoyancy on the overall boiling process and the relative magnitude of other phenomena can be assessed. of a working fluid. It is also affected by both the magnitude and direction of gravity. By

wafer that has been "seeded" with five individually-controlled nucleation sites to study bubble This facility will conduct two pool boiling studies. The first study the Microheater Array Boiling Experiment (MABE) uses two 96 element microheater arrays, 2.7 mm and 7.0 mm in size, to measure localized heat fluxes while operating at a constant temperature. The other The Boiling eXperiment Facility (BXF) is being built for the Microgravity Science Glovebox. experiment, the Nucleate Pool Boiling eXperiment (NPBX) uses a 85 mm diameter heater nucleation, growth, coalescence and departure.

The BXF uses normal-perfluorohexane as the test fluid and will operate between pressures are highly instrumented. Pressure and bulk fluid temperature measurements will be made of 60 to 244 kPa. and temperatures of 35 to 60 deg C. Both sets of experimental heaters with standard rate video. A high speed video system will be used to visualize the boiling process through the bottom of the MABE heater arrays.

The BXF is currently schedule to fly on Utilization Flight-13A.1 to the ISS with facility integration into the MSG and operation during Increment 15






Overview

The Boiling eXperiment Facility is designed to fit inside the Microgravity Science Glovebox (MSG) and allow the operation of two distinct experiments:

- Miro-heater Array Boiling Experiment (MABE) PI: Prof. Jungho Kim, University of Maryland
- Nucleate Pool Boiling Experiment (NPBX) PI: Prof Wilmy K Dhir Haivorritty of California at Los Angeles

OVERALL OBJECTIVES

- The BXF experiments will provide data on nucleation, bubble dynamics, vapor removal and associated heat transfer under reduced gravity conditions.
 - Validate numerical simulation models that will serve as design tools.
- Pool boiling data will have significant impact on the design of thermal control, food processing and water reclamation.

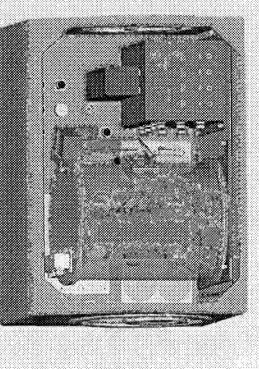

BXF payload in MSG






Microheater Array Boiling experiment (NABE)

Microheater Array Boiling Experiment (MABE) is an experiment planned to obtain spatially and temporally resolved boiling heat transfer measurements in microgravity using an array of microheaters.

Prof. Jungho Kim of the University of Maryland is the principal investigator for MABE and is seeking to determine the differences in local boiling heat transfer mechanisms in microgravity and normal gravity from nucleate boiling, through critical heat flux and into the transition boiling regime.

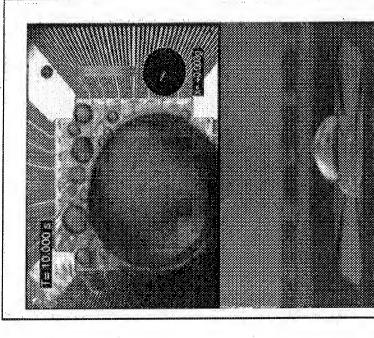


Subcooled nucleate boiling in microgravity: one view (top) through the microheater array colorized with actual heat flux distribution, and a second view (bottom) from the side





Nicleate Pool Boiling experiment (NPBX)

- Nucleate Pool Boiling eXperiment (NPBX) is an experiment planned to develop a basic understanding of heat transfer and vapor removal processes taking place during nucleate boiling from a well characterized surface.
- The Nucleate Pool Boiling Experiment, NPBX, led by Prof. Vijay K. Dhir of the University of California, Los Angeles, will study bubble nucleation, growth and departure and the cooling that is achieved under microgravity conditions

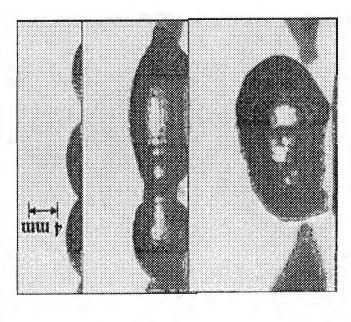

High-speed time-lapse imagery documenting nucleation of 3 separate vapor bubbles (top image), coalescence of the middle and right bubble (middle image) and finally after all the vapor bubbles have merged.



Key Role of movation and Technology

dynamics, vapor removal and associated heat transfer under BXF experiments will provide data on nucleation, bubble microgravity conditions. Validated numerical simulation models could serve as design

Pool boiling data will have significant impact on the design of thermal control, food processing and water reclamation technologies Two-phase thermal control offers isothermal temperature control, reduced pumping power and smaller system mass

Pool boiling is a limiting case of flow boiling → No Flow

Some models for flow boiling utilize a pool boiling term that is opposed by a single phase convection term

h₂ Φ Flow = h_{Pool} Boiling - h_{Liquid} Flow


Temperatures associated with boiling are sufficient for killing





Experiment Specific Hardware


- Experiment (MABE) utilizes two heater arrays (7 mm² and 2.7 mm²). Each heater array consists of 96 individually controlled heaters that operate at a constant temperature and One experiment, Microheater Array Boiling ecord the power required to maintain that emperature.
- nucleation sites or cavities. Each cavity has ts own set of 7 heaters, one that directly heats Experiment (NPBX), utilizes a single heater array, consisting of 5 independently controlled The other experiment, Nucleate Pool Boiling he cavity and the remaining six heaters that surround the cavity.
- All three heater arrays are located in a single video will be acquired throughout the testing est chamber. Temperature, pressure, and

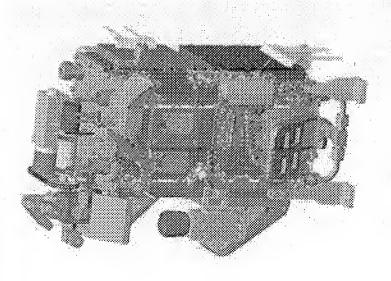




MABE Heater Arrays & Cooling Chamber

96 individually controlled microheaters

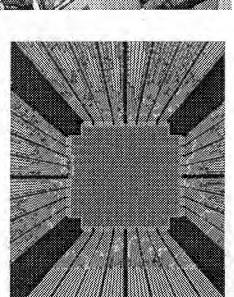

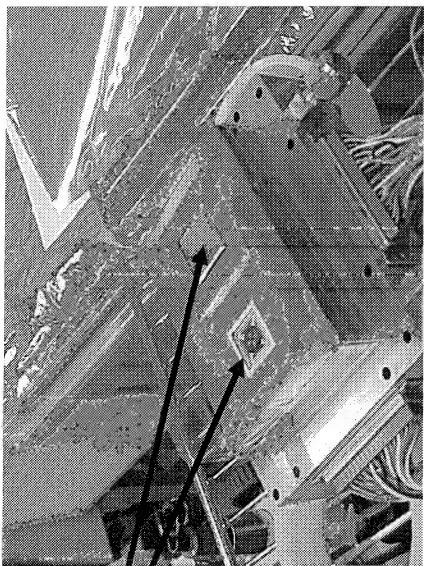



(Currently in MABE Heater testing configuration.)






NBPX Heater

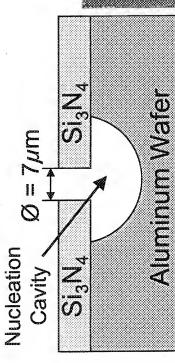


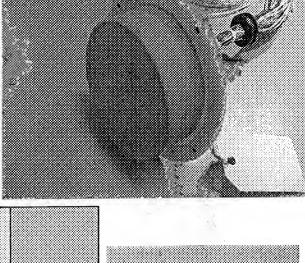


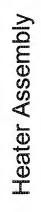

viewed through Image of Cavity

Microscope

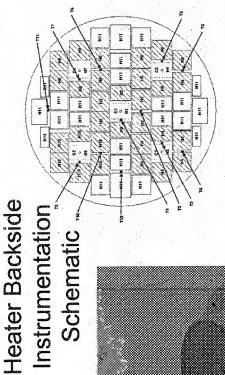

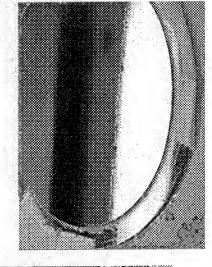


Polished Surface






Tight Hardware in 1850

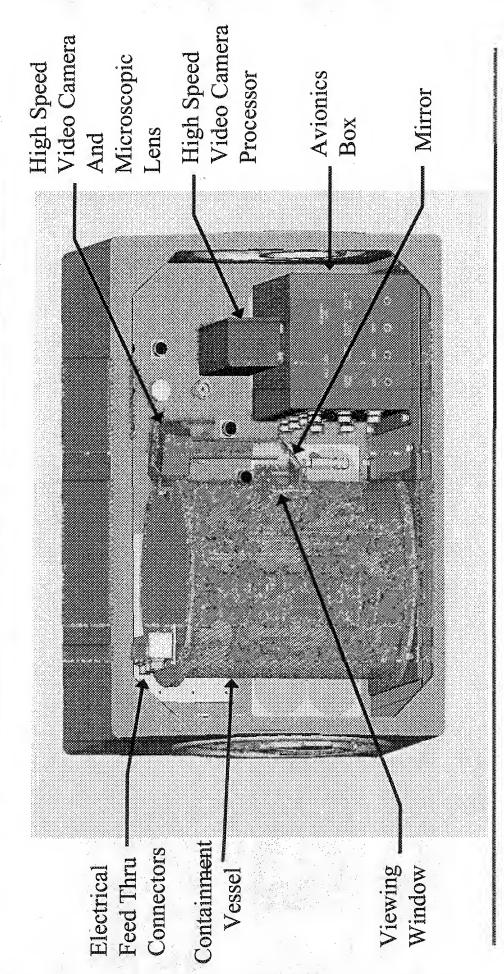





Flight Hardware in Assembly

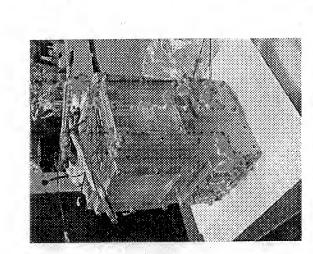


Test Chamber Housing (Sapphire windows are in place, but covered up for protection.)

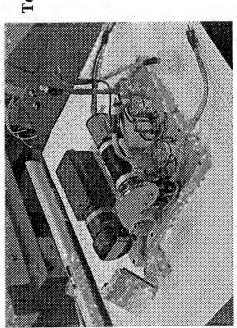

Test Chamber Top Plate

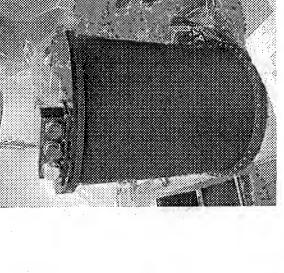

Containment Vessel Housing

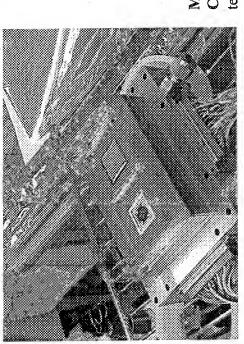

MABE Heater Arrays & Cooling Chamber (Currently in MABE Heater testing configuration.)





Test Fluid

- Commercial grade FC-72 from 3M was originally intended to be used.
- Heat Transfer Fluid for Electronics
- Holds large amounts of Dissolved Oxygen. Aspirated into Premature Infants lungs to help
- MSDS indicated potential thermal decomposition above 200°C
- Concerns about Potential High Temperature Decomposition aboard ISS
- Trace Contaminant Control Subassembly (TCCS) and Solid Fuel Oxygen Generator (SFOG) operate above 450°C
- FC-72 required additional approval to resolve toxicology issues.
- MABE PI requested change due to purity issues based on science.
 - FC-72 a blend of perfluorohexane isomers.
- Most boil around 56°C, but there is a small percentage that boil more a couple of degrees
- Want to avoid "diffuso-thermocapillary" flows.
- Will use Aldrich Chemical Co.
- Purity > 99+% perfluoro-n-hexane (PFNH).
- Approved by JSC Toxicology
- Incorporate "verifiable" triple containment of test fluid.





- Complete Assembly
- PI Testing
- **ISS Testing**



Acknowledgements

- Zin Engineering Team
- Ed Selent, Bill Shiley, Bill Birchenough, Jim Charpie, Bill Arnold, Chris Lant, Natalie Goldin
- <u>U</u>
- Prof. Jungho Kim, University of Maryland
- Prof. Vijay Dhir, UCLA
- Dr. Gopinath Warrier, post-doc
- Fran Chiaramonte and Human Systems Research and Technology Division at NASA Headquarters